



## Important Use and Care Instructions

Improper placement or use of this Ovenliner may cause permanent damage to your oven. Please read these instructions carefully prior to using the Ovenliner.

### CAUTION

- Failure to use the Ovenliner as directed could damage your oven
- DO NOT use directly on oven element or open flame.
- DO NOT use above 500° F (260° C)
- DO NOT use self-clean mode with Ovenliner in oven – remove it first
- Clean the Ovenliner regularly – do not allow cooking fats or oils to build up
- DO NOT cover or block any holes inside the oven – covering holes could create unsafe carbon monoxide levels
- DO NOT use in conjunction with aluminum foil.

### PROPER PLACEMENT FOR ELECTRIC OVENS

Place Ovenliner on the bottom wire rack of the oven NOT the floor of the oven. You may place baking dishes and pans directly on the Ovenliner's surface. If the Ovenliner is larger than the oven rack, the Ovenliner should be trimmed (with a regular pair of household scissors) to fit within the perimeters of the oven rack. For optimum circulation, the Ovenliner should not touch the walls or door of the oven.

**Please note:** Ovenliners are safe to use in convection ovens. For optimum circulation, please ensure that you trim the Ovenliner so that there is between 1 and 2 inches between all sides of the Ovenliner and the walls (and door) of the oven. You may place baking dishes and pans directly on the Ovenliner's surface.

### PROPER PLACEMENT FOR GAS OVENS

Place Ovenliner on the bottom wire rack NOT on the floor of the oven. You may place baking dishes and pans directly on the Ovenliner's surface. If the Ovenliner is larger than the oven rack, the Ovenliner should be trimmed (with a regular pair of household scissors) to fit within the perimeters of the oven rack. For optimum circulation, the Ovenliner should not touch the walls or door of the oven.

**Please note:** Ovenliners are safe to use in convection ovens. For optimum circulation, please ensure that you trim the Ovenliner so that there is between 1 and 2 inches between all sides of the Ovenliner and the walls (and door) of the oven. You may place baking dishes and pans directly on the Ovenliner's surface.

DO NOT cover or block any holes inside the oven.

### Care and Cleaning

It is important to clean the Ovenliner regularly. Do not allow cooking fats or oils to build up on the surface of the Ovenliner. Chef's Planet Ovenliners are dishwasher safe or can be washed in warm soapy water. Wipe dry with a soft cloth. To preserve the nonstick qualities, do not fold the Ovenliner or use abrasive cleaners or sharp implements. After use some discoloration may occur but will not affect performance.

### For Bird Owners

The Avian community has expressed concern regarding nonstick coated materials and their impact on birds. Published scientific tests have not revealed any dangers, however as a socially responsible company we do not recommend our Ovenliners for those who keep pet birds in the house. Severe cooking fumes, smoke, odors and misuse of nonstick coated cooking products can potentially cause damage to the health of pet birds.